


MODEL	DIMENSIONS (INCHES)							INLET/ OUTLET SIZE	BRINE CONN. SIZE*	DRAIN CONN. SIZE
	A	B	C	D	E	F	G			
CVIT-90M	77	38	14	18	30	18	2"	1 1/2"	1 1/2"	
CVIT-90MD/90ALT	77	38	14	18	30	18	2"	1 1/2"	1 1/2"	
CVIT-120M	77	46	16	24	54	24	2"	1 1/2"	1 1/2"	
CVIT-120MD/120ALT	77	46	16	24	54	24	2"	1 1/2"	1 1/2"	
CVIT-150M	79	48	18	24	54	24	2"	1 1/2"	1 1/2"	
CVIT-150MD/150ALT	79	48	18	24	54	24	2"	1 1/2"	1 1/2"	
CVIT-210M	79	51	21	24	54	24	2"	1 1/2"	1 1/2"	
CVIT-210MD/210ALT	79	51	21	24	54	24	2"	1 1/2"	1 1/2"	
CVIT-300M	86	60	24	30	48	30	2"	1 1/2"	1 1/2"	
CVIT-300MD/300ALT	86	60	24	30	48	30	2"	1 1/2"	1 1/2"	
CVIT-450M	84	75	30	39	48	39	2"	1 1/2"	1 1/2"	
CVIT-450MD/450ALT	84	75	30	39	48	39	2"	1 1/2"	1 1/2"	
CVIT-600M	96	81	36	39	48	39	2"	1 1/2"	1 1/2"	
CVIT-600MD/600ALT	96	81	36	39	48	39	2"	1 1/2"	1 1/2"	

M - METERED MD - METERED DUAL UNIT ALT - ALTERNATING

* BRINE CONNECTION IS A COMPRESSION FITTING

NOTES:

- (1) ALL PIPING & VALVES TO BE FURNISHED BY OTHERS.
- (2) AN ELECTRICAL OUTLET SHOULD BE PROVIDED WITHIN 5 FEET OF THE EQUIPMENT
- (3) UNIONS SHOULD BE LOCATED ON THE INLET AND OUTLET CONNECTIONS OF CONTROL VALVE TO FACILITATE SERVICING.
- (4) DO NOT MAKE A DIRECT CONNECTION TO THE DRAIN. PROVIDE AN AIR GAP OF AT LEAST FOUR TIMES THE DIAMETER OF THE DRAIN PIPE TO CONFORM TO THE SANITATION CODES AND TO PERMIT THE OBSERVATION OF DRAIN FLOW.
- (5) ALLOW 24 INCHES ABOVE THE SOFTENER FOR FILLING.

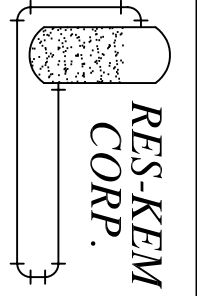

PO BOX 1059
 MEDIA, PA 19063
 TELEPHONE: 610.358.0717
 FAX: 610.358.4642
 E-MAIL: sales@reskem.com
 INTERNET: http://www.reskem.com

This document is the property of RES-KEM CORP. and is hereby subject to confidential use. It shall not be reproduced, furnished to others or used for other than its intended purpose without the express written consent of RES-KEM CORP.

CVIT SERIES
 WATER SOFTENER

